

INSTALLATION GUIDE

InnoGain VS

IMPORTANT REMARKS

- a. Care should be taken to avoid sharp edges which may damage the flexible outer cover.
- b. InnoGain should only be used in concrete.
- c. Always ensure the InnoGain is pulled squarely from the concrete.


- 1** Place the InnoGain VS over the base plate.
 - a. For wooden moulds, the base should be screwed to the formwork or attached through the mould with a fixing bolt
 - b. For steel moulds, the magnetic base should be placed on the formwork and can also be secured with a fixing screw if required

- 2** Hand tighten until the screw achieves a positive stop.

- 3** For the 330mm long product, the maximum concrete fill level is 300mm, leaving a minimum of 30mm of InnoGain VS above the concrete. Where the InnoGain VS is 350mm long, a minimum of 50mm must be left above the concrete.

- 4** When the concrete is cured, undo the screw until the InnoGain VS is released and pull out of the unit.

- 5** The recess requires no cleaning and is usable immediately.

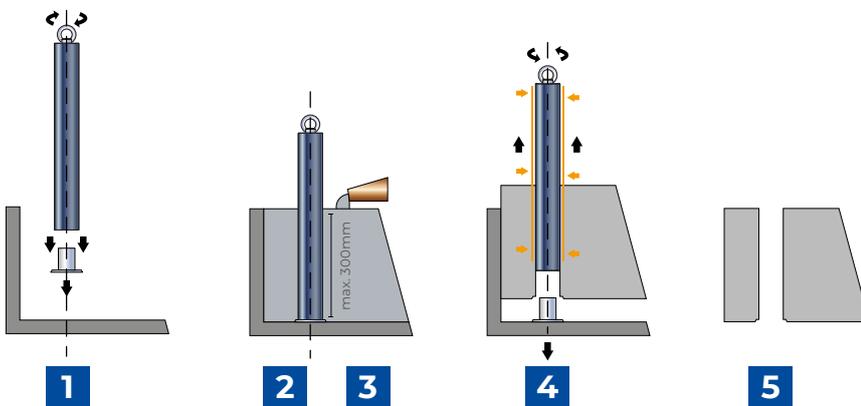

An innovation brought to market
by Performance Technology.

Issue 2 - 02 2019

IMPORTANT: Directions for use are given for guidance only and are not intended to form part of any contract. They should be varied or adapted to suit your particular materials or conditions of use. Goods supplied by the company are made to approved standards from the highest quality raw materials but no warranty or guarantee is given as to their suitability for any particular purpose or application, and no liability is accepted for any loss or damage arising directly or indirectly from the use of the Company's products irrespective of any information given to us as to intended use of such products. It is therefore recommended that prospective users should test a sample of this product under their own conditions to satisfy themselves that the product is suitable for the purpose intended.

0161 447 8320
www.InnoGain.co.uk