


INSTALLATION GUIDE

InnoGain CF Steel formwork

IMPORTANT REMARKS

- a. Care should be taken to avoid sharp edges which may damage the flexible outer cover.
- b. InnoGain should only be used in concrete.
- c. Always ensure the InnoGain is pulled squarely from the concrete.

- 1** Place on the InnoGain MGM in the holes in the InnoGain C.
Plug an InnoGain MB (Mini Block) in the InnoGain C where holes are not created in concrete.
- 2** Attach the InnoGain CF with magnets on the steel formwork.
- 3** After casting and the concrete has cured remove the formwork obliquely or straight up. Straight aside is not allowed this can damage the InnoGain MGM (see drawing).
- 4** Remove all the InnoGain MGM with the pull out key M8.
- 5** Remove the InnoGain C with the pull out key KO10.
- 6** Result a clear dust free profiled anti tapered hole.

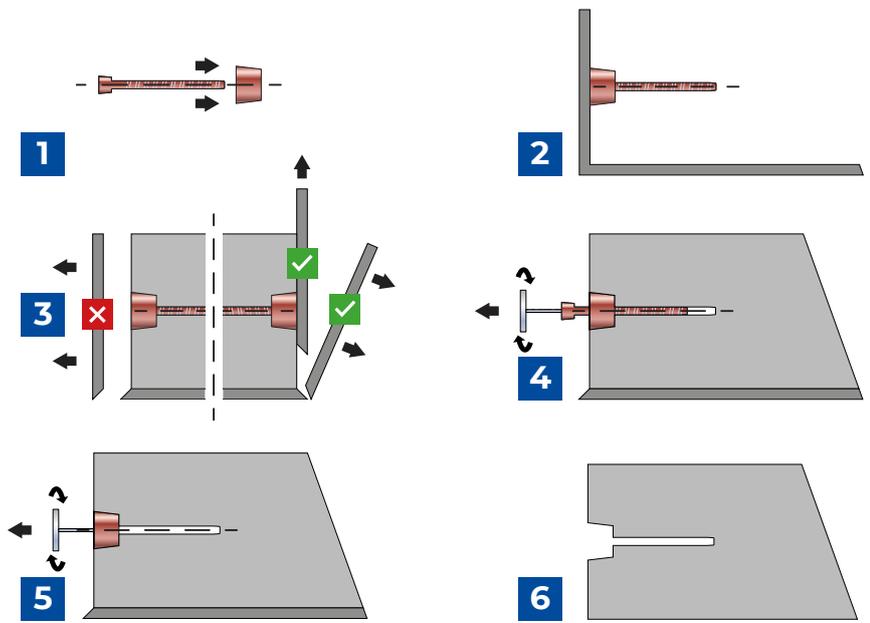

Seal the remaining holes in concrete with Innogain MB cover caps if required.
Fill the recesses to manufacture's specifications with an approved Chemical Mortar. Install the bars in the recess as per the Chemical mortar manufacturer's instructions. Once complete, the starter bars are ready for use.

Issue 2 02 2019

IMPORTANT: Directions for use are given for guidance only and are not intended to form part of any contract. They should be varied or adapted to suit your particular materials or conditions of use. Goods supplied by the company are made to approved standards from the highest quality raw materials but no warranty or guarantee is given as to their suitability for any particular purpose or application, and no liability is accepted for any loss or damage arising directly or indirectly from the use of the Company's products irrespective of any information given to us as to intended use of such products. It is therefore recommended that prospective users should test a sample of this product under their own conditions to satisfy themselves that the product is suitable for the purpose intended.



An innovation brought to market
by Performance Technology.

0161 447 8320
www.InnoGain.co.uk